

# **Specification Sheet**



## Carbon Monoxide Gas Sensor CO/CF-200

CO Gas Sensor in Compact Housing

## **Key Features**

Selective and sensitive measurement of low CO concentrations

## **Applications**

- · Continuous Air Quality Monitoring
- · Safety and Environmental Control

## **Measurement**

Operation Principle	3-Electrode Electrochemical
Nominal Range	0 - 200 ppm
Maximum Overload	400 ppm
Inboard Filter	To remove acidic gases
Output Signal	700 ± 120 nA/ppm
Resolution (Electronics dependent)	< 0.1 ppm
T90 Response Time	< 50 s
Typical Baseline Range (pure air, 20°C)	-1 ppm to 1 ppm
Maximum Zero Shift (+20°C to +40°C)	see Graph
Repeatability	< 2 % of signal
Output Linearity	Linear
Gain (Only applies to 4-Electrode sensors)	-

Rev.: Apr-20 Page 1 of 5

Phone: +41 43 311 72 00 Membrapor AG
Fax: +41 43 311 72 01 Birkenweg 2
E-Mail: info@membrapor.ch
Website: www.membrapor.ch
Switzerland

#### Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar



# **Specification Sheet**



## Carbon Monoxide Gas Sensor CO/CF-200

## **Electrical**

Rec. Load Resistor	10 - 33 Ω
Bias (V_Sens-V_Ref)	not recommended
Conformity to RoHS directive	RoHS Compliance

## **Environmental**

Relative Humidity Range	15 % to 90 % RH non-condensing
Temperature Range	-40 °C to 50 °C
Pressure Range	Atmospheric ± 10%
Pressure Coefficient	N.D.
Humidity Effect	None

## <u>Lifetime</u>

Expected Operation Life	3 years in air
Expected Long Term Output Drift in air	< 2 % signal loss per month
Filter Life	N.D.
Storage Life	6 months in container
Rec. Storage Temperature	5°C - 20°C
Warranty Period	12 months from date of dispatch

Rev.: Apr-20 Page 2 of 5

Phone: +41 43 311 72 00 Membrapor AG
Fax: +41 43 311 72 01 Birkenweg 2
E-Mail: info@membrapor.ch
Website: www.membrapor.ch
Switzerland

#### Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar




# **Specification Sheet**



## Carbon Monoxide Gas Sensor CO/CF-200

#### **Compact-Size Outline Dimensions**

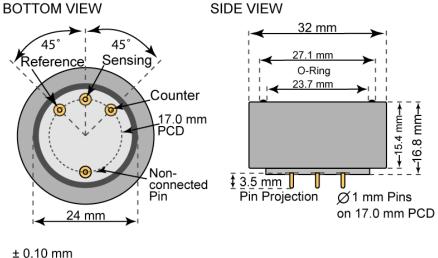

## **Mechanical**

Weight 13 g

Orientation Any

Housing material Polycarbonate

Rev.: Apr-20 Page 3 of 5

Phone: +41 43 311 72 00 Membrapor AG Fax: +41 43 311 72 01 Birkenweg 2 E-Mail: info@membrapor.ch CH-8304 Wallisellen Website: www.membrapor.ch Switzerland

#### Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar







## Carbon Monoxide Gas Sensor CO/CF-200

## **Cross Sensitivity Data**

The table below does not claim to be complete. Interfering gases should not be used for calibration. Please contact Membrapor AG for further support regarding cross sensitivities.

Interfering Gas	Concentration [ppm]	Reading [ppm]
$C_2H_4$	100	50
CH <sub>2</sub> O	7	0
Cl <sub>2</sub>	20	0
Ethanol (C <sub>2</sub> H <sub>5</sub> OH)	30	< 2
$H_2$	100	< 40
H <sub>2</sub> S	20	0
HCI	20	0
NH <sub>3</sub>	80	0
NO	50	0
$NO_2$	5	0
O <sub>3</sub>	1	0
SO <sub>2</sub>	5	0

## **Important Application Notes**

• NO readily forms NO2 in presence of O2.

Rev.: Apr-20 Page 4 of 5

Phone: +41 43 311 72 00
Fax: +41 43 311 72 01
E-Mail: info@membrapor.ch
Website: www.membrapor.ch

Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

#### Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar








## Carbon Monoxide Gas Sensor CO/CF-200

## **Temperature dependence**

The output of an electrochemical sensor varies with temperature. The graphs below show the temperature-dependent variation of baseline and sensitivity, respectively. The results shown here are raw data (batch average) without any post-processing steps. The sensitivity and baseline are referenced to the signal at 20°C (reference point).

Please note: It is highly recommended to acquire the temperature dependence curves with the whole instrument. The sampling system, the humidity, the electronics and the interaction between the electronics and the sensor have a significant impact on the temperature dependence of the final measurement reading.

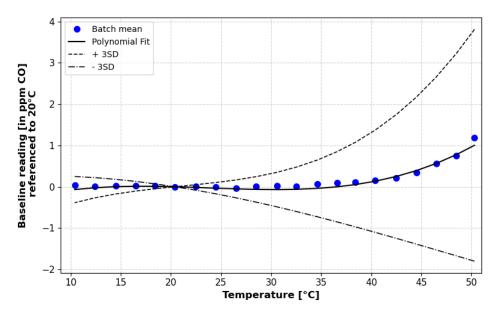

Baseline shifted with respect to reference point at 20°C.

Rev.: Apr-20 Page 5 of 5

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: info@membrapor.ch Website: www.membrapor.ch Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

#### Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar